

sysWORXX CANopen Chip CoC-100

System Manual Version 2.00

Edition November 2023

Document No.: L-2365_04

SYS TEC electronic AG Am Windrad 2 D-08468 Heinsdorfergrund
Phone: +49 (3765) 38600-0 Fax: +49 (3765) 38600-4100
Web: <https://www.systec-electronic.com> Mail: info@systec-electronic.com

Changes

Date/Version	Section	Changes	Author/Editor
09.11.2023/ 2.00	All		Daniel Glau

Product names used in this manual which are also registered trademarks have not been marked extra. The missing © mark does not imply that the trade name is unregistered. Nor is it possible to determine the existence of any patents or protection of inventions on the basis of the names used.

The information in this manual has been carefully checked and is believed to be accurate. However, it is expressly stated that SYS TEC electronic AG does not assume warranty or legal responsibility or any liability for consequential damages which result from the use or contents of this user manual. The information contained in this manual can be changed without prior notice. Therefore, SYS TEC electronic AG shall not accept any obligation.

Furthermore, it is expressly stated that SYS TEC electronic AG does not assume warranty or legal responsibility or any liability for consequential damages which result from incorrect use of the hardware or software. The layout or design of the hardware can also be changed without prior notice. Therefore, SYS TEC electronic AG shall not accept any obligation.

© Copyright 2023 SYS TEC electronic AG, D-08468 Heinsdorfergrund

All rights reserved. No part of this manual may be reproduced, processed, copied or distributed in any way without the express prior written permission of SYS TEC electronic AG.

Contact	Direct	Your Local Distributor
Address:	SYS TEC electronic AG Am Windrad 2 D-08468 Heinsdorfergrund GERMANY	Please contact us for information about your local distributor. info@systec-electronic.com
Ordering Information:	+49 (0) 37 65 / 38 600-0 info@systec-electronic.com	
Technical Support:	+49 (0) 37 65 / 38 600-0 support@systec-electronic.com	
Fax:	+49 (0) 37 65 / 38 600 4100	
Web Site:	https://www.systec-electronic.com	

Table of Contents

1	Introduction	8
2	Overview / Where to find what?	9
3	Product Description.....	10
4	Hardware Overview.....	11
4.1	Pin Layout.....	11
4.2	Pin description of the board.....	12
4.3	Board Configuration.....	13
4.3.1	DIP-Switch.....	13
4.3.2	CAN Transceiver	14
4.4	Reset	14
4.5	Configuration of communication parameters.....	14
4.6	Default Configuration.....	17
4.7	Pin Assignments for Selected I/O Configurations CoC-100.....	17
4.8	Reserved pin assignments for selected I/O configurations CoC-100 V3	19
4.9	Technical data	19
4.9.1	Electrical Parameters at 3.3 V Range (4003002).....	20
4.9.2	Electrical Parameters at 5.0 V Range (4003001).....	20
5	Setting up the CANopen Chip CoC-100.....	22
5.1	Power Supply.....	22
5.2	CAN Interface	23
6	QuickStart.....	24
6.1	Startup of the CANopen Chip CoC-100	24
6.2	Shut-Down of the CANopen Chip CoC-100	24
6.3	CAN Message and Identifier.....	25
6.4	PDO Mapping for I/O's.....	25
6.4.1	Default Mapping CANopen Chip CoC-100.....	26
6.4.2	Default Mapping CANopen Chip CoC-100 V3	26
6.5	Board Reset.....	26
6.6	Node Guarding	27
7	Controller Area Network – CAN.....	29
7.1	Communication with CANopen®.....	29
7.2	CANopen – Open Industrial Communication	30
7.3	Network topology parameters.....	31
8	CANopen Communication	32
8.1	CANopen Fundamentals	32
8.2	CANopen Device Profiles	32
8.3	Communication Profile.....	32
8.4	Service Data Objects	33
8.5	Process Data Objects	33
8.6	PDO-Mapping.....	34
8.7	Error Handling.....	35
8.8	Network Services.....	35
8.8.1	Life Guarding	35
8.8.2	Heartbeat.....	35

8.8.3	Heartbeat Producer	36
8.8.4	Heartbeat Consumer	36
8.9	Network Boot-Up	36
8.10	Object Dictionary Entries	38
8.11	PDO Mapping Example	39
8.12	Input/Output Assignment to Object Dictionary Entries	39
9	CANopen Chip CoC-100 Operation	41
9.1	CANopen State Transitions	41
9.2	Power On	41
9.3	PRE-OPERATIONAL	41
9.4	OPERATIONAL	41
9.5	STOPPED	42
9.6	Restart Following Reset / Power-On	42
9.7	NMT-Boot-Configuration	42
9.8	Analog Input Operation	43
9.8.1	Handling Analog Values	43
9.8.2	Calibrate Analog Values	43
9.8.3	Formula for Calculating the Analog Input Value	44
9.8.4	Selecting the Interrupt Trigger	44
9.8.5	Interrupt Source	45
9.8.6	Interrupt Enable	45
9.8.7	Interrupt Upper and Lower Limit	45
9.8.8	Delta Function	45
9.8.9	Example for Trigger Conditions	46
9.9	Functionality of PWM Outputs	46
9.10	Emergency Message	47
9.10.1	Error Code	47
9.10.2	Error Register	47
9.11	Display State at Run and Error LED	47
9.11.1	Run LED	48
9.11.2	Error LED	48
10	Operation in the Event of Errors	49
10.1	State of the CANopen Chip CoC-100 in the Event of Errors	49
10.2	Output Handling in the Event of Errors	49
10.3	Digital Outputs	49
10.3.1	PWM Outputs	49
10.4	Changing from Error State to Normal Operation	50
11	Object Dictionary CANopen Chip CoC-100	51
	Index	54

List of Tables

Table 1: Overview of relevant manuals for the sysWORXX CANopen Chip CoC-100.....	9
Table 2: Pinout of the DIPmodul-connector	12
Table 3: Configuration of Node-ID	15
Table 4: Configuration of CAN bit rate	16
Table 5: Configuration of CAN bit rate over LSS	16
Table 6: I/O configuration.....	17
Table 7: Number of I/O's depending on the selected configuration CoC-100	17
Table 8: Input/Output configuration and I/O pin assignment CoC-100.....	18
Table 9: Number of I/O's depending on the selected configuration CoC-100 3V3.....	19
Table 10: Input/Output configuration and I/O pin assignment CoC-100 V3	19
Table 11: CAN ID for different PDO types	25
Table 12: PDO Mapping for I/O's CoC-100	26
Table 13: PDO Mapping for I/O's CoC-100 V3	26
Table 14: Recommended cable length	31
Table 15: COB-Identifier (Communication Target Object Identifier)	34
Table 16: Emergency-Message contents	35
Table 17: Heartbeat Message Structure	36
Table 18: Structure of a Consumer Heartbeat Time Entry	36
Table 19: Calculation of the COB-identifier from the Node Addresses	36
Table 20: Base COB identifier	37
Table 21: Description of State Flow Diagram Symbols	38
Table 22: PDO Mapping Example	39
Table 23: Object Dictionary Input/Output Entries CoC-100	40
Table 25: NMT-Master messages for status control	41
Table 26: SDOs to set the NMT boot configuration	43
Table 27: Storage of Analog Values Byte 2	43
Table 28: Storage of Analog Values Byte 1	43
Table 29: Interrupt Trigger Bits	44
Table 30: Emergency message	47
Table 31: Run LED States	48
Table 32: Error Led States	48
Table 33: Example for Error Handling digital outputs	49
Table 34: Example for Error Handling PWM outputs	50
Table 35: Object Dictionary of the CANopen Chip CoC-100	52

List of Figures

Figure 1: Top view of the sysWORXX CANopen Chip CoC-100.....	10
Figure 2: Pin Layout	11
Figure 3: DIP-Switch pinout and functions.....	13
Figure 4: DIP-Switch pinout and functions.....	13
Figure 5: Structure of /RESIN Line	14
Figure 6: Voltage and current operating requirements	22
Figure 7: Design for common mode choke, recommendation	23

Figure 8: State diagram of a CANopen device	38
Figure 9: Trigger Conditions.....	46

1 Introduction

Thank you for choosing the SYS TEC sysWORXX CANopen Chip CoC-100. This product provides to you an innovative CANopen device.

Please take some time to read through this manual carefully. It contains important information about the commissioning, configuration and programming of the sysWORXX CANopen Chip CoC-100. It will assist you in getting familiar with the functional range and usage of the sysWORXX CANopen Chip CoC-100. This document is complemented by other manuals. **Fehler! Verweisquelle konnte nicht gefunden werden.** in section 2 shows a listing of relevant manuals for the sysWORXX CANopen Chip CoC-100. Please also refer to those complementary documents.

For more information, optional products, updates et cetera, we recommend you to visit our website: <https://www.systec-electronic.com>. The content of this website is updated periodically and provides you with downloads of the latest software releases and manual versions.

2 Overview / Where to find what?

The document describes the startup procedure of the sysWORXX CANopen Chip CoC - 100 on the basis of Development Kit sysWORXX CANopen Chip CoC-100 as well as the basic procedures for software development with this module. There are different hardware manuals for all hardware component like the sysWORXX CANopen Chip CoC-100 self, the Development-Boards as well as the reference circuits. Software-sided, the sysWORXX CANopen Chip CoC-100 is delivered with a pre-installed CANopen bootloader and CANopen firmware. Table 1 lists up all relevant manuals for the sysWORXX CANopen Chip CoC-100.

Information about...	In which manual?
Basic information about the sysWORXX CANopen Chip CoC-100 (configuration, administration, connection assignment, firmware update, reference designs et cetera)	In this manual
Basic information about the sysWORXX CANopen Chip CoC-100 Developmentboard DIPmodul	Developmentboard für sysWORXX CANopen Chip

Table 1: Overview of relevant manuals for the sysWORXX CANopen Chip CoC-100

3 Product Description

Like its predecessor, the sysWORXX CANopen Chip F40, the new sysWORXX CANopen Chip CoC-100 is a completely ready-to-use plug-in module (SOM) with pre-programmed CANopen firmware for controlling decentralized CAN nodes. The integrated standard DIP-40 connector forms the interface to the target hardware and makes the sysWORXX CANopen Chip CoC-100 a versatile communication interface.

With up to 7 I/O configurations, it provides an extensive selection of usable digital inputs and outputs, analog inputs and PWM outputs. The on-board setting options allow flexible module configuration. The sysWORXX CANopen Chip CoC-100 is a CANopen slave device according to the CANopen device profile CiA DSP 401 V3.1.0 and CANopen communication profile CiA 301 V4.2.0 (tested with the CiA Conformance Test Tool. LEDs indicate the device status according to CiA 303-3 V1.4.

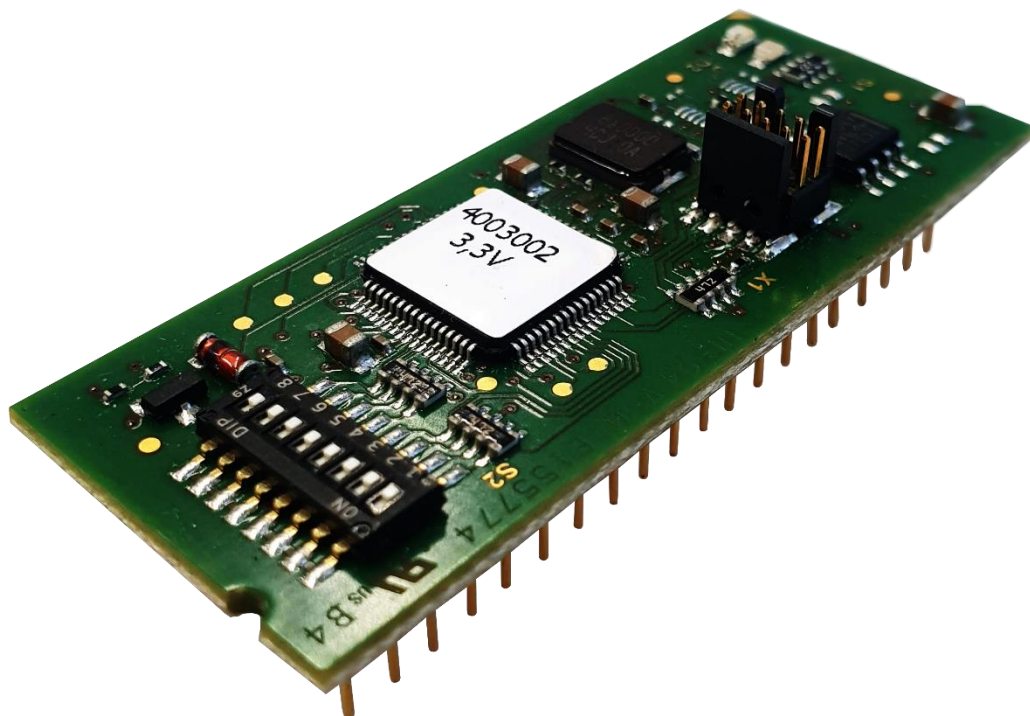


Figure 1: Top view of the sysWORXX CANopen Chip CoC-100

4 Hardware Overview

4.1 Pin Layout

Please note that all module connections are not to exceed their expressed maximum voltage or current. Maximum signal input values are indicated in the corresponding controller User's Manual/Data Sheets located on the SYS TEC Products CD. As damage from improper connections varies according to use and application, it is the user's responsibility to take appropriate safety measures to ensure that the module connections are protected from overloading through connected peripherals. All controller signal extends to the pin header connector without any additional protection circuitry. External circuitry in which the CANopen Chip CoC-100 is implemented must follow the guidelines for EMC conformance. As Figure 1 indicates, all controller signals extend to standard-width (2.54 mm / 0.10 in.) pin rows lining two sides the board (referred to as DIPmodul-connector). This allows the CANopen Chip CoC-100 to be plugged into any target application like a "big chip".

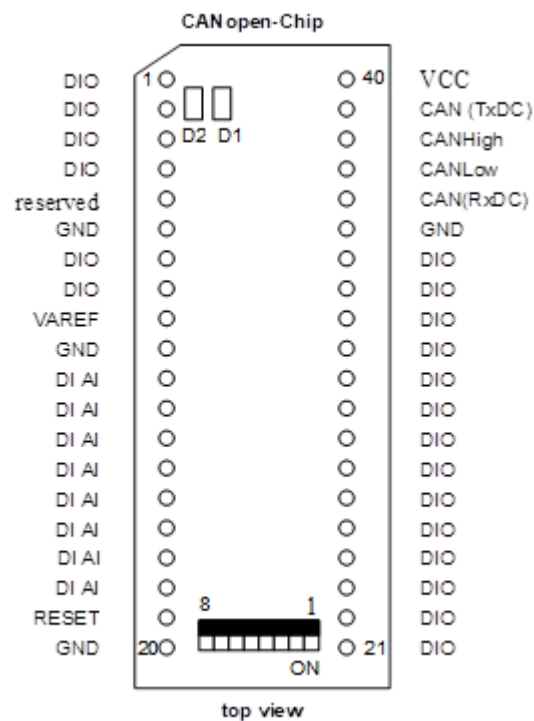


Figure 2: Pin Layout

A more detailed description of pin signals and functions is available in Table 2.

4.2 Pin description of the board

Pin Number	Function	I/O	Description
1	PTC8	I/O	Port Pin PTC8 of the microcontroller
2	PTC9	I/O	Port Pin PTC9 of the microcontroller
3	PTD1	I/O	Port Pin PTD1 of the microcontroller
4	PTD4	I/O	Port Pin PTD4 of the microcontroller
5	PTD0	I/O	Reserved for compatibility
6	GND	-	Ground 0V
7	PTD15	I/O	Port Pin PTD15 of the microcontroller
8	PTC15	I/O	Port Pin PTC15 of the microcontroller
9	VAREF	-	Reference voltage input of the on-chip A/D converter
10	GND	-	Analog Ground
11	PTA0	I	Port Pin PTA0 of the microcontroller
12	PTA1	I	Port Pin PTA1 of the microcontroller
13	PTA6	I	Port Pin PTA6 of the microcontroller
14	PTA7	I	Port Pin PTA7 of the microcontroller
15	PTB0	I	Port Pin PTB0 of the microcontroller
16	PTB1	I	Port Pin PTB1 of the microcontroller
17	PTB2	I	Port Pin PTB2 of the microcontroller
18	PTB3	I	Port Pin PTB3 of the microcontroller
19	RESIN	I	Reset input of the module, 0 - 1 transition triggers the RESET signal
20	GND	-	Ground 0V
21	PTE10	I	Port Pin PTE10 of the microcontroller
22	PTE0	I	Port Pin PTE0 of the microcontroller
23	PTE1	I	Port Pin PTE1 of the microcontroller
24	PTE2	I	Port Pin PTE2 of the microcontroller
25	PTE3	I	Port Pin PTE3 of the microcontroller
26	PTE6	I	Port Pin PTE6 of the microcontroller
27	PTE7	I	Port Pin PTE7 of the microcontroller
28	PTE9	I	Port Pin PTE9 of the microcontroller
29	PTC16	I	Port Pin PTC16 of the microcontroller
30	PTC17	I	Port Pin PTC17 of the microcontroller
31	PTA2	I	Port Pin PTA2 of the microcontroller
32	PTA3	I	Port Pin PTA3 of the microcontroller
33	PTD5	I	Port Pin PTD5 of the microcontroller
34	PTD2	I	Port Pin PTD2 of the microcontroller
35	GND	-	Ground 0 V
36	RxDC	I	Receive line of the on-chip CAN controller
37	CANL	I/O	CANL in-/output of the CAN transceiver
38	CANH	I/O	CANH in-/output of the CAN transceiver
39	TxDC	O	Send line of the on-chip CAN controller
40	VCC	-	Power supply +5 V = or 3.3V

Table 2: Pinout of the DIPmodul-connector

The assignment between applicable I/O lines and their specific function is provided in Table 2.

The use of an external CAN driver or an external galvanic isolation of CAN interface (use of signals RxDC and TxDC instead of CANL and CANH) demands the disassembling of resistors on J1 of the module. A simultaneously use of onboard CAN driver and external CAN driver is not possible.

4.3 Board Configuration

4.3.1 DIP-Switch

An 8-position DIP-switch is located on the topside of the CANopen Chip CoC-100. Four of these switches enable configuration of the Node-ID for CANopen, two set the CAN baud rate of the CAN bus, and the remaining two switches are used to enable the I/O configuration.

Additional configurations are possible within CANopen (*refer to section 4.5*)

Figure 3 shows the DIP-switch pinout and functions. The switch position "OFF" corresponds to logic-zero or low-level signals while "ON" represents high level or logic-one. See Figure 2 location and switch positions.

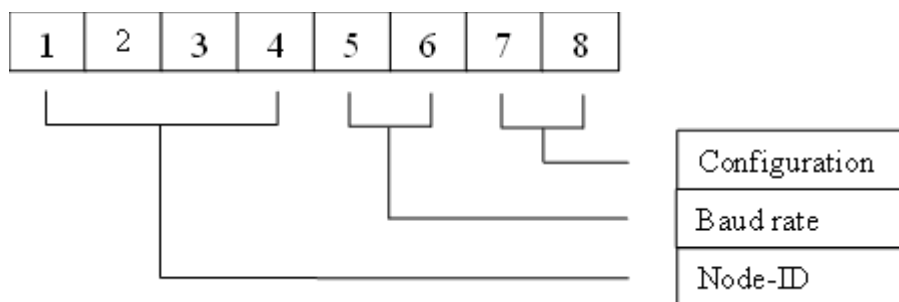


Figure 3: DIP-Switch pinout and functions

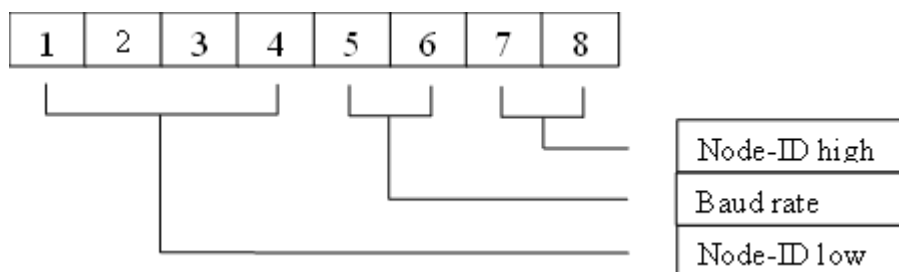


Figure 4: DIP-Switch pinout and functions

4.3.2 CAN Transceiver

The firmware operates with 11-bit identifier (Full CAN 2.0B passive). The selection of the CAN transceiver is made by selection of the corresponding pins of the CANopen Chip CoC-100. Pins 37 and 38 for use of the on-board or pins 36 and 39 for use of an external optically isolated CAN transceiver device.

4.4 Reset

A 100 nF capacitor is connected to the microcontroller 's RESET input. This enables automatic release of a power-on reset. The capacitor is charged via a 4,7kOhm resistor when power is turned on and holds the RESET input at a low level for a duration of approximately 450 microseconds.

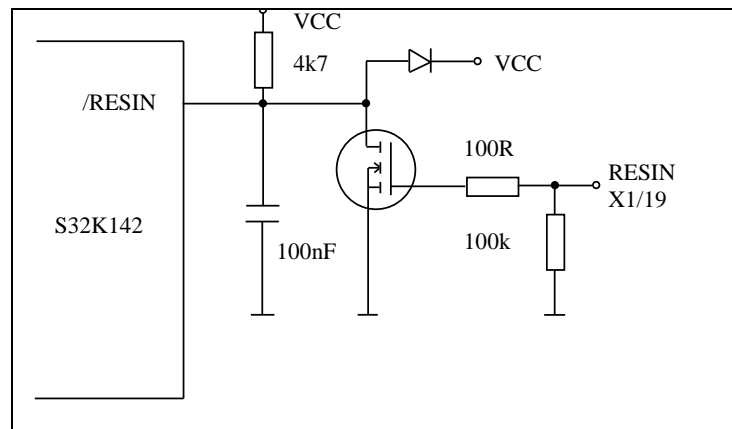


Figure 5: Structure of /RESIN Line

4.5 Configuration of communication parameters

Node Address

Configuration via DIP-switch:

The CANopen Chip CoC-100 is configured for a basic Node-ID of 40H. An additional, device-specific offset can be added to this base address and configured with the DIP-switch S1 DIP1 to DIP4. The resulting Node-ID is then calculated as follows:

$$\text{Node-ID} = 40\text{H} + \text{DIP1} \cdot 2^0 + \text{DIP2} \cdot 2^1 + \text{DIP3} \cdot 2^2 + \text{DIP4} \cdot 2^3$$

with $\text{DIP}_x = 1$ if the corresponding switch is closed (position ON) and $\text{DIP}_x = 0$ if the switch is open (position OFF).

Example:

If both DIP-switches DIP1 and DIP4 are closed the following Node-ID will be configured:

$$\text{Node-ID} = 40\text{H} + 1 \cdot 2^0 + 0 \cdot 2^1 + 0 \cdot 2^2 + 1 \cdot 2^3$$

$$\text{Node-ID} = 40\text{H} + 1 \cdot 1 + 1 \cdot 8$$

$$\text{Node-ID} = 40\text{H} + 1 + 8$$

$$\text{Node-ID} = 49\text{H}$$

Note:

The configuration 0FH on DIP1...DIP4 is reserved and may not be used in an application. This setting resets the CANopen Chip CoC-100 into its factory default state.

The following table gives an overview of the possible configurations:

DIP1	DIP2	DIP3	DIP4	Node -ID
OFF	OFF	OFF	OFF	40H (default)
ON	OFF	OFF	OFF	41H
OFF	ON	OFF	OFF	42H
ON	ON	OFF	OFF	43H
OFF	OFF	ON	OFF	44H
ON	OFF	ON	OFF	45H
OFF	ON	ON	OFF	46H
ON	ON	ON	OFF	47H
OFF	OFF	OFF	ON	48H
ON	OFF	OFF	ON	49H
OFF	ON	OFF	ON	4AH
ON	ON	OFF	ON	4BH
OFF	OFF	ON	ON	4CH
ON	OFF	ON	ON	4DH
OFF	ON	ON	ON	4EH
ON	ON	ON	ON	Reserved
DIP1	DIP2	DIP3	DIP4	Node -ID
OFF	OFF	OFF	OFF	40H (default)
ON	OFF	OFF	OFF	41H
OFF	ON	OFF	OFF	42H
ON	ON	OFF	OFF	43H
OFF	OFF	ON	OFF	44H
ON	OFF	ON	OFF	45H
OFF	ON	ON	OFF	46H
ON	ON	ON	OFF	47H
OFF	OFF	OFF	ON	48H
ON	OFF	OFF	ON	49H
OFF	ON	OFF	ON	4AH
ON	ON	OFF	ON	4BH
OFF	OFF	ON	ON	4CH
ON	OFF	ON	ON	4DH
OFF	ON	ON	ON	4EH
ON	ON	ON	ON	Reserved

Table 3: Configuration of Node-ID

Node- Address Configuration via CANopen

Layer Setting Services (LSS) implemented in the CANopen protocol can be used to freely assign a Node-ID on the CANopen Chip CoC-100. This address can be in the range from 1 to 127 decimal (01H...7FH). After such LSS configuration the DIP-switch settings for the Node-ID are no longer valid.

Note:

Changing the Node-ID via CANopen LSS also results in resetting the Object Dictionary (OD) with default values or the values saved in the non-volatile memory.

Bit Rate Configuration via DIP-switch:

Switches DIP5 and DIP6 of DIP-switch can be used to configure one of 4 pre-defined CAN bit rates available on the CANopen Chip CoC-100. The following bit rates are available:

DIP5	DIP6	Bit rates kBit/s
ON	OFF	20
OFF	OFF	125
OFF	ON	500
ON	ON	1000

Table 4: Configuration of CAN bit rate

Bit Rate Configuration via CANopen

Layer Setting Services (LSS) implemented in the CANopen protocol can be used to freely assign a desired bit rate on the CANopen Chip CoC-100. After such LSS configuration, the DIP-switch settings for the bit rate are no longer valid.

Index in LSS Timing Table	Bit rate kBit/s
0	1000
1	800
2	500
3	250
4	125
5	100
6	50
7	20
8	10

Table 5: Configuration of CAN bit rate over LSS

I/O Configuration via DIP-switch:

The CANopen Chip CoC-100 firmware features four pre-defined I/O configurations that can be configured using switches DIP7 and DIP8 of DIP-switch. The following I/O configurations are available:

DIP7	DIP8	I/O Configuration
OFF	OFF	I/O Configuration 0
ON	OFF	I/O Configuration 1
OFF	ON	I/O Configuration 2
ON	ON	I/O Configuration 3

Table 6: I/O configurationThe I/O configuration of the CANopen Chip CoC-100, version 4003001, cannot be set via the DIP-switch. The I/O configuration is set to configuration 1 by default. To change the I/O configuration a SDO access to the object dictionary index 2000H is necessary.

I/O Configuration via CANopen

The desired I/O configuration on the CANopen Chip CoC-100 can also be selected via an entry in the Object Dictionary (OD). The manufacturer-specific OD entry 2000H is provided for this purpose. The selection is done by writing the applicable I/O configuration number to this object. For example, when writing the value 5 to index 2000H the resulting I/O configuration will be configuration number 5. After such OD configuration, the DIP-switch settings for the I/O configuration are no longer valid.

Note:

Changing the Node-ID via CANopen OD entry also results in resetting the Object Dictionary (OD) with default values.

4.6 Default Configuration

At the time of delivery all DIP-switches on the CANopen Chip CoC-100 are open. This results in the following factory default settings:

- Node-ID = 40H
- Bit rate = 125 kBit/s
- Configuration = I/O configuration 0

4.7 Pin Assignments for Selected I/O Configurations CoC-100

Configuration	Digital Inputs	Digital Outputs	Analog Inputs	PWM Outputs
0	14	8	2	4
1	8	8	8	4
2	16	8	-	4
3	8	16	-	4
4	16	-	8	4
5	24	-	-	4
6	16	4	4	4

Table 7: Number of I/O's depending on the selected configuration CoC-100

Pin#	Config 0	Config 1	Config 2	Config 3	Config 4	Config 5	Config 6
1	DO 4	DO 0	DO 0	DO 0	DI 12	DI 20	DI 0
2	DO 5	DO 1	DO 1	DO 1	DI 13	DI 21	DI 1
3	DO 6	DO 2	DO 2	DO 2	DI 14	DI 22	DO 0
4	DO 7	DO 3	DO 3	DO 3	DI 15	DI 23	DO 1
5							
6							
7	PWM 0	PWM 0	PWM 0	PWM 0	PWM 0	PWM 0	PWM 0
8	PWM 1	PWM 1	PWM 1	PWM 1	PWM 1	PWM 1	PWM 1
9							
10							
11	AI 0	AI 0	DI 0	DI 0	AI 0	DI 0	AI 0
12	AI 1	AI 1	DI 1	DI 1	AI 1	DI 1	AI 1
13	DI 0	AI 2	DI 2	DI 2	AI 2	DI 2	AI 2
14	DI 1	AI 3	DI 3	DI 3	AI 3	DI 3	AI 3
15	DI 2	AI 4	DI 4	DI 4	AI 4	DI 4	DI 2
16	DI 3	AI 5	DI 5	DI 5	AI 5	DI 5	DI 3
17	DI 4	AI 6	DI 6	DI 6	AI 6	DI 6	DI 4
18	DI 13	AI 7	DI 7	DI 7	AI 7	DI 7	DI 5
19							
20							
21	DI 12	DO 4	DO 4	DO 4	DI 8	DI 16	DI 14
22	DI 11	DO 5	DO 5	DO 5	DI 9	DI 17	DI 15
23	DI 10	DI 0	DI 8	DO 8	DI 0	DI 8	DI 6
24	DI 9	DI 1	DI 9	DO 9	DI 1	DI 9	DI 7
25	DI 8	DI 2	DI 10	DO 10	DI 2	DI 10	DI 8
26	DI 7	DI 3	DI 11	DO 11	DI 3	DI 11	DI 9
27	DO 3	DI 4	DI 12	DO 12	DI 4	DI 12	DI 10
28	DO 2	DI 5	DI 13	DO 13	DI 5	DI 13	DI 11
29	DO 1	DI 6	DI 14	DO 14	DI 6	DI 14	DI 12
30	DO 0	DI 7	DI 15	DO 15	DI 7	DI 15	DI 13
31	DI 6	DO 6	DO 6	DO 6	DI 10	DI 18	DO 2
32	DI 5	DO 7	DO 7	DO 7	DI 11	DI 19	DO 3
33	PWM 2	PWM 2	PWM 2	PWM 2	PWM 2	PWM 2	PWM 2
34	PWM 3	PWM 3	PWM 3	PWM 3	PWM 3	PWM 3	PWM 3
35							
36							
37							
38							
39							
40							

Table 8: Input/Output configuration and I/O pin assignment CoC-100

Description of table entries:

DI - *Digital Input*
DO - *Digital Output*
AI - *Analog Input*
PWM - *PWM Output*

Note:

Configuration 0 is set up at time of delivery. Whenever changing the I/O configuration user must ensure that the circuitry connected to the applicable I/O pins meets the requirements of the specific I/O signal type. In appropriate signal connection could damage or destroy the CANopen Chip CoC-100. We recommend to disconnect the I/O pins when changing the I/O configuration.

4.8 Reserved pin assignments for selected I/O configurations CoC-100 V3

Table 9: Number of I/O's depending on the selected configuration CoC-100 3V3

Table 10: Input/Output configuration and I/O pin assignment CoC-100 V3

Description of table entries:

DI - *Digital Input*
DO - *Digital Output*
AI - *Analog Input*

Note:

Configuration 0 is set up at time of delivery. Whenever changing the I/O configuration user must ensure that the circuitry connected to the applicable I/O pins meets the requirements of the specific I/O signal type. In appropriate signal connection could damage or destroy the CANopen Chip CoC-100. We recommend to disconnect the I/O pins when changing the I/O configuration.

4.9 Technical data

Environmental Conditions

Operational temperature:

-40°C to +85°C

Storage temperature:

40°C to +90 °C

Humidity (rel.)

0% to 90 %, no condensation

Mechanical Specifications

Dimensions: 24.0 mm * 58.7 mm., ± 0.3 mm

Weight: approximately: 10.5 grams

Connector Type: 40-pin dual–inline IC socket (2.54 mm pitch), pin diameter
0.47 mm, contact length:3.2 mm

These specifications describe the standard configuration of the CANopen Chip CoC-100 as of the printing of this manual.

4.9.1 Electrical Parameters at 3.3 V Range (4003002)

Operating Voltage:	3.0 V to 3.6 V
Power consumption:	typ. 25 mA, 48 MHz CPU clock, 25°C; max. 185mA depends on circuitry of I/O's and CAN
Clock generation:	external 8 MHz crystal
Output voltage of the I/O lines:	
low level:	< 0.8 V
high level:	V _{CC} - 0.8 V
Output current of the I/O lines:	
low level 1 pin maximum current:	12mA
high level 1 pin maximum current:	14mA
high level all pins maximum current:	100mA
Input voltage of the I/O lines:	
low level:	>VSS – 0.3V; <VCC * 0.3
high level:	> 0.7 * VCC; <VCC + 0.3V
Analog inputs:	
Input voltage:	GND VREF
Resolution:	12-bit
Input capacity:	19 pF (typ.)
Reference voltage:	GND + 2.7V ... VCC
On-board CAN FD transceiver:	
Type:	TI TCAN337GDR
Maximum bit rate:	1000 Kbit/s / 5000 Kbit/s
Number of nodes:	<100 (depending on all CAN transceivers in the CAN network)

4.9.2 Electrical Parameters at 5.0 V Range (4003001)

Operating Voltage:	4.5 V to 5.5 V
Power consumption:	typ. 25 mA, 48 MHz CPU clock, 25°C; max. 195mA depends on circuitry of I/O's and CAN
Clock generation:	external 8 MHz crystal
Output voltage of the I/O lines:	
low level:	< 0.8 V
high level:	> V _{CC} - 0.8 V

Output current of the I/O lines:	
low level 1 pin maximum current:	20mA
high level 1 pin maximum current:	20mA
high level all pins maximum current:	100mA
Input voltage of the I/O lines:	
low level:	$>VSS - 0.3V; <VCC * 0.3$
high level:	$> 0.7 * VCC; <VCC + 0.3V$
Analog inputs:	
Input voltage:	GND VREF
Resolution:	12-bit
Input capacity:	19 pF (typ.)
Reference voltage:	GND + 2.7V ... VCC
On-board CAN FD transceiver:	
Type: MCP2562	
Maximum bit rate:	1000 Kbit/s / 5000 Kbit/s
Number of nodes:	<100, depending on all CAN transceivers in the CAN network

5 Setting up the CANopen Chip CoC-100

5.1 Power Supply

The CANopen Chip CoC-100 requires a power supply in a Range of 2.7V to 5.5V. Power can be supplied via pins 6 (GND) and pin 40 (V_{CC}). Additional there are pins 20 and 35 for GND connection. It is recommended to use a standard DIL-40 socket in order to integrate the CANopen Chip CoC-100 into a target hardware environment.

Symbol	Description	Min.	Max.	Unit	Notes
V_{DD}^2	Supply voltage	2.7 ³	5.5	V	4
V_{DD_OFF}	Voltage allowed to be developed on V_{DD} pin when it is not powered from any external power supply source.	0	0.1	V	
V_{DDA}	Analog supply voltage	2.7	5.5	V	4
$V_{DD} - V_{DDA}$	V_{DD} -to- V_{DDA} differential voltage	-0.1	0.1	V	4
V_{REFH}	ADC reference voltage high	2.7	$V_{DDA} + 0.1$	V	5
V_{REFL}	ADC reference voltage low	-0.1	0.1	V	
V_{ODPU}	Open drain pullup voltage level	V_{DD}	V_{DD}	V	6
$I_{INJPAD_DC_OP}^7$	Continuous DC input current (positive / negative) that can be injected into an I/O pin	-3	+3	mA	
$I_{INJSUM_DC_OP}$	Continuous total DC input current that can be injected across all I/O pins such that there's no degradation in accuracy of analog modules: ADC and ACMP (See section Analog Modules)	—	30	mA	

S32K1xx Data Sheet, Rev. 9, 09/2018

10 NXP Semiconductors

General

1. Typical conditions assumes $V_{DD} = V_{DDA} = V_{REFH} = 5$ V, temperature = 25 °C and typical silicon process unless otherwise stated.
2. As V_{DD} varies between the minimum value and the absolute maximum value the analog characteristics of the I/O and the ADC will both change. See section [I/O parameters](#) and [ADC electrical specifications](#) respectively for details.
3. S32K148 will operate from 2.7 V when executing from internal FIR. When the PLL is engaged S32K148 is guaranteed to operate from 2.97 V. All other S32K family devices operate from 2.7 V in all modes.
4. V_{DD} and V_{DDA} must be shorted to a common source on PCB. The differential voltage between V_{DD} and V_{DDA} is for RF-AC only. Appropriate decoupling capacitors to be used to filter noise on the supplies. See application note [AN5032](#) for reference supply design for SAR ADC.
5. V_{REFH} should always be equal to or less than $V_{DDA} + 0.1$ V and $V_{DD} + 0.1$ V
6. Open drain outputs must be pulled to V_{DD} .
7. When input pad voltage levels are close to V_{DD} or V_{SS} , practically no current injection is possible.

Figure 6: Voltage and current operating requirements

5.2 CAN Interface

The CANopen Chip CoC-100 is populated with the NXP FS32K142 microcontroller, featuring Full 2.0B on-chip CAN, and an on-board CAN transceiver (MCP2562). The following CAN signals are available at header pins aligning two edges of the board:

CAN_HIGH	Pin 38
CAN_LOW	Pin 37
CAN_GND	Pin 6, 20 or 35

The potentials CAN_GND and GND (general board-level Ground) are identical.

These CAN signals can be routed as follows to a DB-9 socket, according to the CiA 301 Communication Profile standard

CAN_HIGH	Pin 7
CAN_LOW	Pin 2
CAN_GND	Pin 3 and/or Pin 6

The CAN signals can be optically isolated from the CANopen Chip CoC-100 using an external transceiver IC. The maximum transmission rate is 5MBit/s. The maximum CAN bus load should not exceed 50%.

In electromagnetic disturbed environments we recommend to use a common mode choke for CAN_HIGH / CAN_LOW like the B82789C0513N from TDK (Epcos)

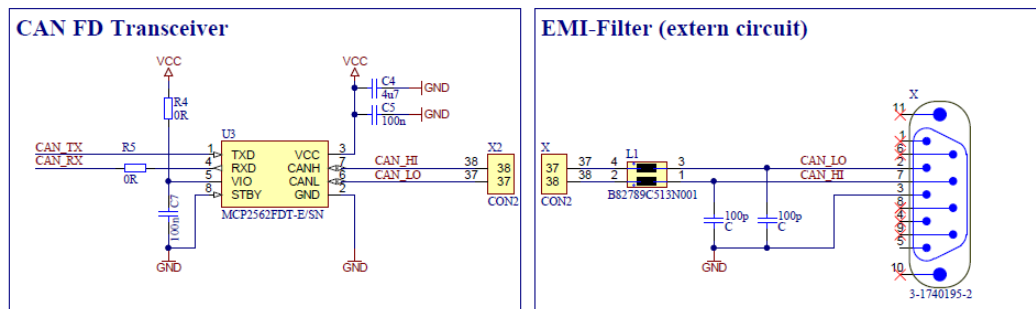



Figure 7: Design for common mode choke, recommendation

6 QuickStart

This section describes basic start-up of the CANopen Chip CoC-100. It assumes basic knowledge of CANopen networks. It also requires, that the CANopen Chip CoC-100 is properly connected to the CAN bus and power is supplied to the CANopen Chip CoC-100. Please refer to sections 7 and 8 for basic description of CAN and CANopen.

6.1 Startup of the CANopen Chip CoC-100

 
All values in the object dictionary (OD) are pre-configured with default-values. Hence, start-up configuration of the CANopen Chip CoC-100 is not necessary. The CANopen Chip CoC-100 supports the CANopen Minimum Boot-Up. Following reset and internal initialization, the board is in PRE-OPERATIONAL state (refer to section 9.3 PRE-OPERATIONAL). Upon receipt of a single message (*Start Remote Node*) the board switches to OPERATIONAL state (refer to section 9.4 OPERATIONAL).



The first data byte contains the Start command, while the second byte contains the node address (*NodeID*). If you specify the value 00H then all nodes in the network (Broadcast) are started.

6.2 Shut-Down of the CANopen Chip CoC-100

 All node activity can be stopped by receipt of the *Enter Pre-Operational State* message. This message consists of the following:



The *NodeID* identifies the node-addresses. *NodeID* = 00H addresses all devices on a network (Broadcast).

When in "PRE-OPERATIONAL" state, SDO-Transfer is still possible. All configuration parameters are then captured and "frozen" as they were in their most recent active state.

Note:

CANopen configuration tools, such as Pro-CANopen from Vector or CDE and CANinterpreter from emotas always use SDO-Transfer when accessing a CANopen node. Due to this fact, these tools also work in “PRE-OPERATIONAL” state.

6.3 CAN Message and Identifier

According to **CiA 301**, a specific CAN identifier is assigned to each CAN message containing process data (Process-Data-Object - PDO). The CAN identifier for input and output data is derived from the node address.

CAN Identifier (hex)	Data Type
180H + node address	1 st Tx PDO
280H + node address	2 nd Tx PDO
380H + node address	3 rd Tx PDO
480H + node address	4 th Tx PDO
200H + node address	1 st Rx PDO
300H + node address	2 nd Rx PDO
400H + node address	3 rd Rx PDO
500H + node address	4 th Rx PDO

Table 11: CAN ID for different PDO types

6.4 PDO Mapping for I/O's

The PDO mapping of the available I/O's depends on the selected I/O configuration (refer to Table 12). The CANopen Chip CoC-100 also supports variable PDO mapping. This allows for free mapping of inputs to Tx PDOs and Rx PDOs to output lines. Such free mapping settings can be saved in the on-board nonvolatile memory by writing to index 1010H.

6.4.1 Default Mapping CANopen Chip CoC-100

In the default mapping, the 4th Tx PDO and the 2nd Rx PDO and the 4th Rx PDO are invalid. This results in the following arrangement of I/O's and PDOs:

Config	1 st Tx PDO	2 nd Tx PDO	3 rd Tx PDO	1 st Rx PDO	3 rd Rx PDO
0	DI 0...DI 7 DI 8...DI 13	AI 0...AI 1	invalid	DO 0...DO7	duty cycle PWM 0...PWM 3
1	DI 0...DI 7	AI 0...AI 3	AI 4...AI 7	DO 0...DO7	duty cycle PWM 0...PWM 3
2	DI 0...DI 7 DI 8...DI 15	invalid	invalid	DO 0...DO7	duty cycle PWM 0...PWM 3
3	DI 0...DI 7	invalid	invalid	DO 0...DO7 DO8...DO15	duty cycle PWM 0...PWM 3
4	DI 0...DI 7 DI 8...DI 15	AI 0...AI 3	AI 4...AI 7	invalid	duty cycle PWM 0...PWM 3
5	DI 0...DI 7 DI 8...DI 15 DI 16...DI 23	invalid	invalid	invalid	duty cycle PWM 0...PWM 3
6	DI 0...DI 7 DI 8...DI 15	AI 0...AI 3	invalid	DO 0...DO3	duty cycle PWM 0...PWM 3

Table 12: PDO Mapping for I/O's CoC-100

6.4.2 Default Mapping CANopen Chip CoC-100 V3

Table 13: PDO Mapping for I/O's CoC-100 V3

6.5 Board Reset

Following each board reset, the CANopen Chip CoC-100 transmits a Boot-up message without data content. Temporary suspension of CANopen Chip CoC-100 activity and subsequent restart can be recognized without Node-Guarding (*refer to section 0 Node Guarding*). The transmitter of this message will be detected by the CAN identifier.

11-bit CAN Identifier	1 Byte Data
700H+ NodeID	00H

6.6 Node Guarding

Node Guarding and *life guarding* functions monitor operation of the CANopen network. Distributed peripheral CAN devices are monitored via Node Guarding, while the Life Guarding function supervises the guarding master. To realize Node Guarding, the master requests a cyclic status message from the slave nodes. This status request is initiated with a remote frame message that contains only the status data. The RTR-Bit (Remote Transmit Request Bit) is set for this reason.

11-bit CAN Identifier	1 Byte Data
700H + NodeID	Node Guarding

Following transmission of the remote frame message, the slave nodes respond with a status message consisting of 1 byte of service data.

11-bit CAN Identifier	1 Byte Data
700H+ NodeID	Guarding Protocol

The data bytes within status message further contain a toggle bit that is supposed to change after each message. Should the status and toggle bits not correspond to the message pattern expected by the Master, or should no response to a message follow, the Master assumes a Slave malfunction. If the Master requests cyclic guard messages, a Slave node can recognize shut-down of the Master. This is the case if the Slave does not receive a message request from the Master within the pre-configured *Life Time*. The Slave then assumes failure of the Master, sets its inputs into Error state, transmits an emergency message and switches into *pre-operational* state (condition index [67FEH] or [1029H] = 0).

The *Life Time Factor* is configured within the Object [100DH] and is multiplied by the *Guard Time* [100CH]. This results in the *Life Time* of the "Node Guarding Protocol". The time base of these cycles is 1ms.

The *Guard Time* specifies how much time must elapse between two *Node Guarding* messages. The *Life Time Factor* indicates how many times the *Guard Time* can elapse before an error is generated.

Default Values:

Life Time Factor	0
Guard Time	0 ms.
Life Time	0 sec.

Example Values:

Life Time Factor 3
Guard Time 1000 ms.
Life Time 3 sec.
This side was left blank intentionally.

7 Controller Area Network – CAN

7.1 Communication with CANopen®

The Controller Area Network (the CAN bus) is a serial data communications bus for real-time applications. CAN was originally developed by the German company Robert Bosch for use in the automotive industry. It is a two-wire bus system that provides a cost-effective communication bus alternative to expensive and cumbersome harness wiring. CAN operates at data rates of up to 1 Mbit per second and has excellent error detection and confinement capabilities. On account of its proven reliability and robustness, CAN is being used in many other automation and industrial applications. CAN is now an international standard and is documented in ISO 11898 (for high-speed applications).

CANopen is a higher-layer network protocol based on the CAN serial bus system, specifically, it is a software level protocol standard for industrial communication between automated devices. CANopen is authorized by the User and Manufacturers' Group "CAN in Automation e.V." (CiA®) and adheres to ISO/OSI standards.

CANopen unleashes the full power of CAN by allowing direct peer to peer data exchange between nodes in an organized, hierarchical manner. The network management functions specified in CANopen simplify project design, implementation and diagnosis by providing standard mechanisms for network start-up and error management.

CANopen supports both cyclic and event-driven communication. This makes it possible to reduce the bus load to a minimum, while still maintaining extremely short reaction times. High communication performance can be achieved at relatively low baud rates, thus reducing EMC problems and minimizing cable costs. CANopen is the ideal networking system for all types of automated machinery. One of the distinguishing features of CANopen is its support for data exchange at the supervisory control level as well as accommodating the integration of very small sensors and actuators on the same physical network. This avoids the unnecessary expense of gateways linking sensor/actuator bus systems with higher communication networks and makes CANopen particularly attractive to original equipment manufacturers.

CANopen Advantages

- Vendor-independent open-source structure
- Universal standards
- Supports inter-operability of different devices
- High speed real-time capability
- Modular - covers simple to complex devices
- User-friendly - wide variety of support tools available
- Real-Time-capable communication for process data without protocol overhead;
- a modular, configurable structure that can be tailored to the needs of the user and his or her networked application

CANopen Features

- Auto configuration of the network
- Easy access to all device parameters
- Device synchronization
- Cyclic and event-driven data transfer
- Synchronous reading or setting of inputs, outputs or parameters

In addition to its designation as a physical CAN layer standard, CANopen is a "layer-7 protocol" implementation and is defined by the CANopen Communications Profile in CiA 301.

7.2 CANopen – Open Industrial Communication

The following Special Interest and Working Groups have developed CANopen communication profile:

- SIG Distributed I/O
- SIG Motion Control

and the Working Group (WG)

- WG Higher Layer Protocols

The CiA 301 CANopen standard derived from the results of the ASPIC ESPRIT project. The communication profile describes in detail how data are exchanged over the CAN bus. This data can be sorted into two main types:

- Process data
- Service data

Process data is real-time data generated by a networked device. This data is transmitted via a Process Data Object (PDO). The CANopen communication profile defines which protocol is used for data transmission in PDO. PDOs can be used simultaneously by multiple networked devices, hence enabling broadcast operations.

Service data are used to configure and establish parameters for networked devices. Service data directly communicate to the object dictionary of each device and are transmitted using Service Data Objects (SDO).

An SDO can only be used between two networked devices, typically a configuration Master and another device that is to be configured. The SDO transfer is also capable of confirmation of message receipt.

Each individual networked device provides several PDOs and SDOs. This enables configuration of multi-master networks, in addition to typical single Master / multiple Slave networks.

In addition to data classes, CANopen defines the communication classes that describe:

- Synchronized communication
- Event processing
- Communication initialization

CANopen also defines device profiles that describe the basic functions of networked devices. These device profiles consist of the following two primary components:

- Functional Description
- Operational Description

The **Functional Description** of a device is represented by functional blocks and data flows. Descriptive parameters are stored in the Object Dictionary. Each Object Dictionary has a pre-defined structure. Hence, parameters for networked devices of a certain type (for instance I/O modules or drives) are always located in the same place within an Object Dictionary. Parameters can be classified as mandatory, optional and manufacturer-specific.

The **Operational Description** of a device is described by state flow diagram (*refer to Figure 8 in Section 8.9*).

Device Profiles are standardized for:

- Generic I/O Modules CiA 401
 digital I/O's
 analog I/O's
- Drives and Motion Control CiA 402
 Servo drivers
 Step motors and
 Frequency transformers
- Measurement Devices and CiA 405
 Closed Loop Controllers CiA 405
 IEC61131-3 Programmable Devices CiA 406
 Encoder CiA 406
 Inclinometer CiA 410

Please refer to the CAN in Automation homepage www.can-cia.org for up-to-date information of available device profiles. All device profiles correspond to the DRIVECOM Profile with CAN-specific modifications to enable multi-master capability.

Software for CANopen Slave functions is based on services for data exchange and network management as defined in CiA 301 standard.

7.3 Network topology parameters

The wiring topology of a CAN network should be as close as possible to a single line structure in order to avoid cable-reflected waves. Network topology parameters shall be in accordance with the following table.

Cable Length [m]	Max. Bitrate [kBit/s]	Length-related resistance [mOhm/m]	Wire Size [mm²]
0-40	1000	70	0.25 – 0.34
40-100	500	<60	0.34 – 0.60
100-500	100	<40	0.50 – 0.60
500-1000	20	<26	0.75 – 0.80

Table 14: Recommended cable length

8 CANopen Communication

8.1 CANopen Fundamentals

Open fieldbus systems enable design of distributed network systems by connecting components from multiple vendors while minimizing the effort required for interfacing. To achieve an open networking system, it is necessary to standardize the various layers of communication used.

CANopen uses the international CAN standard, ISO 11898 as the basis for communication. This standard covers the lower two layers of communication specified by the OSI model. Based on this, the CANopen profile family specifies standardized communication mechanisms and device functionality for CAN-based systems. The profile family, which is available and maintained by CAN in Automation e.V. (CiA) consists of the Application layer and communication profile (CiA 301), various frameworks and recommendations (CiA 30x) and various device profiles (CiA 40x).

The network management functions specified in CANopen simplify project design, implementation and diagnosis by providing standard mechanisms for network start-up and error management.

CANopen is the ideal networking system for all types of automated machinery. One of the distinguishing features of CANopen is its support for data exchange at the supervisory control level as well as accommodating the integration of very small sensors and actuators on the same physical network. This avoids the unnecessary expense of gateways linking sensor/actuator bus systems with higher communication networks and makes CANopen particularly attractive to original equipment manufacturers.

8.2 CANopen Device Profiles

CANopen profiles are defined for communication in CiA 301, for I/O Modules in CiA 401, for Drives and Motion Control in CiA 402 and for Encoder in CiA 406. Other profiles are in preparation.

The profiles of a CANopen device are stored in the Object Dictionary (OD) in a defined manner. The Object Dictionary manages the objects using a 16-bit index. This index can be further subdivided with an 8-bit sub-index. All entries are summarized within groups.

For example, the Communication profile is located at index 1000H to 1FFFH.

Certain types of object entries are mandatory; others are optional or manufacturer-specific. The following types of objects are available:

- Domain: a variable number of data
- Deftype: a definition entry, such as unsigned16
- Defstruct: record type, such as PDO mapping
- Var: an individual variable
- Array: a multiple data field, whereby each individual data field is a simple variable of the same type
- Record: a multiple data field, whereby the data fields are any combination of simple variables

With structured entries, subindex 0 indicates the number of following subindices.

8.3 Communication Profile

The interface between application and CANopen device is clearly defined by a uniform communication profile. The CANopen communication protocol defines several methods for transmission and receipt of messages over the CAN bus, including transfer of synchronous and asynchronous messages.

Coordinated data exchange across an entire network is possible by means of synchronous message transmission. Synchronous data transfer allows network wide coordinated data exchange. Pre-defined communication objects, i.e., SYNC Objects transmitted on a cyclic time period and Time Stamp objects support synchronous transfers. Asynchronous or event messages may be transmitted at any time and allow a device to immediately notify another device without having to wait for the next synchronous data transfer cycle.

8.4 Service Data Objects

Network management controls communication and device profiles of all networked devices. For this type of access service data objects (SDO) are used. In CANopen devices, all parameters and variables that are accessible via CAN are clearly arranged in the Object Dictionary.

All objects in the Object Dictionary can be read and/or written via SDOs. SDO represent a peer-to-peer communication between networked nodes. This access occurs according to the Multiplexed Domain protocol, whereby the index and subindex of the addressed objects are used as a multiplexor. This protocol is based on handshaking.

Individual parameters are addressed using a 16-bit index and an 8-bit subindex addressing mechanism. In this mode data packages may be larger than 8 bytes using multiple CAN messages. Messages smaller than 5 bytes can be transferred with a transmission acknowledgement. The owner of the Object Dictionary is the server of the domain. Read and write accesses via SDOs are supervised by the CANopen server and are checked for validity.

A variety of access restrictions must be taken into account, such as; *Read only*, *Write only* and *No PDO mapping*. Error messages provide detailed information on any access conflicts. Service Data Objects (SDOs) are normally used for device configuration such as setting device parameters. They are also used to define the type and format of information communicated using the Process Data Objects.

8.5 Process Data Objects

A Process Data Object (PDO) is a CAN message whose data contents, identifier, inhibit time, transmission type and CMS priority are configurable via entries in the Object Dictionary. PDO format and data content of the message may be fixed or dynamically configured using SDO data transfers. PDOs do not contain any explicit protocol overhead, hence enabling very fast and flexible exchange of data between applications running on each node. Hence, PDO transfers are typically used for high speed, high priority data exchange. Data size in a PDO message is limited to 8 bytes or less. PDOs can be transmitted directly from any device on the network simultaneously to any number of other devices. Data exchange across a CANopen network does not require a bus master. This multicast capability is one of the unique features of CAN and is fully exploited in CANopen.

PDO entries start at index 1400H for receipt objects and at 1800H for transmission objects. CANopen permits cyclic and event-controlled communication. The type of transfer indicates the manner of the reaction to the SYNC message; while the inhibit time is the minimum time that must elapse between two transmissions of the PDO. PDOs reduce the bus load to a minimum, achieve a high information flow-rate and can be accessed via remote frames.

A simple CANopen device usually supports four PDOs. These are initialized with preset identifiers. Additional PDOs can be designated, yet to avoid message collision they may be set invalid (deactivated). This deactivation is configured by setting the MSB (bit 31) in the identifier of the PDO.

The message identifier can be found in the Object Dictionary under the entry for communication parameter in subindex 1. Bit 30 indicates if remote request for this PDO is enabled (bit 30 = 0) or not. Bit 29 configures the CAN frame format, bit 29 = 0 indicates 11-bit identifier.

Bit	31	30	29	28 – 11	10 - 0
11-bit-ID	0/1	0/1	0	000000000000 000000	11-bit Identifier
29-bit-ID	0/1	0/1	1	29-bit Identifier	

Table 15: COB-Identifier (Communication Target Object Identifier)

The transmission types in subindex 2 can be configured within a range of 0 to 255. The values 0 to 240 define that the transfer of the PDO is in relation to the SYNC message. The value 0 indicates that current input values are only transmitted upon arrival of a SYNC message and if the requested input value has changed. Values between 1 and 240 indicate that the PDO is transmitted upon arrival of a corresponding number of SYNC messages. The values 241 to 251 are reserved. The values 252 and 253 are intended only for remote objects. For value 252, data is updated but not transmitted upon receipt of the SYNC message. The value 253 updates data upon receipt of the remote request. Values 254 and 255 are used for asynchronous PDOs. The release of these asynchronous PDOs is manufacturer or Device Profile-specific.

The inhibit time is stored in multiples of 100 µs as unsigned16 values at subindex 3.

Subindex 04H is reserved.

Depending on the supported subindices, subindex 0 must be set to the applicable value.

PDO settings must correspond to the I/O profile rules:

- the first transmit and receipt PDO is used for exchange of **digital** data;
- the second transmit and receipt PDO is used for exchange of **analog** data.

If a CANopen device does not support digital inputs or outputs, it is recommended that the first transmit and receipt PDO remains unused. If a CANopen device does not support analog signals, it is recommended that the second transmit and receipt PDO remains unused.

8.6 PDO-Mapping

A unique mapping entry exists for each communication parameter entry of a PDO. This mapping entry is located in the Object Dictionary 200H above the corresponding communication parameter entry for this PDO. This mapping table corresponds to PDO data contents. The requirement for PDO mapping is the presence of variables in the Object Dictionary that are capable of mapping. For example, digital outputs at index 6200H and digital inputs at index 6000H can be mapped. These values can also be set and read out via SDO. However, in order to use the benefits of the CAN bus, the variables of a CANopen device are put in PDOs.

The mapping of variables is organized as follows:

All mapping entries are 4 bytes in size. The number of objects to be mapped is written to subindex 0. Each following subindex contains a reference to the index and subindex of variables and their length stored in "Bit". For example:

60000108H

- reference to index 6000H
- subindex 01
- length 08 bit

In this example the value of the digital input is indicated by the first byte of a transmit PDO. For most CANopen devices, mapping occurs with a granularity of eight (8). This means that a maximum of eight entries per byte is possible for a mapping table.

In special cases mapping of bit objects can be supported. It is also advisable to sometimes exclude areas from mapping. For example, a CANopen device might evaluate only the fifth byte of a PDO. In this case, 2 unsigned16 dummy objects are inserted in the mapping identity, if supported by the CANopen device. A mapping table can be used to appropriately configure communication parameters to encode a PDO for transmission or to decode a received PDO.

8.7 Error Handling

Each node in the network is able to signal error states as far as they are detected by the hardware and software. Error Handling is enabled by Emergency Objects. Internal fatal error states are encoded in error codes and sent only once to the other nodes. If other errors occur, the node remains in error state and transmits a new Emergency Object. If the error is recovered, the node then transmits an error message with the code *No error*. The Emergency message consists of 8 bytes, whereby the first and second bytes contain additional information that is found in the device profiles. The third byte contains the contents of the error register; while the remaining five bytes contain manufacturer-specific information. The Emergency Error code is stored in object [1003H], the *Pre-Defined Error Field*. This creates an error log that chronologically sorts errors. The oldest error is situated at the highest subindex.

Byte	0	1	2	3	4	5	6	7
Content	Emergency Error Code		Error Register, Object [1001H]	Manufacturer Specific Error Field				

Table 16: Emergency-Message contents

8.8 Network Services

In addition to services enabling configuration and data exchange, various CAN network services also support monitoring of networked devices. NMT (network management) services require a node in the network that assumes the functions of the NMT-Masters. The NMT-Master services include initialization of NMT-Slaves, distribution of the identifiers, the node monitoring and network booting.

8.8.1 Life Guarding

Optional node monitoring is achieved by "*Life Guarding*". The NMT-Master periodically transmits a lifeguard message to the Slave. The Slave responds to the Lifeguard message with a return message indicating its present status and a bit that toggles between two messages. Should the Slave not respond or indicate an unexpected status, the NMT-Master application is informed by means of a status message. Moreover, the Slave can detect failure of the Master. *Life Guarding* is started with the transmission of the initial message from the Master.

8.8.2 Heartbeat

Similar to life guarding, the Heartbeat function is an additional network supervisory service. But unlike the life guarding, the Heartbeat does not require a NMT master. Only CANopen Slaves are able to function as Heartbeat Producer and Consumer because they provide an Object Dictionary in order to store the Heartbeat times.

8.8.3 Heartbeat Producer

The Heartbeat Producer cyclically sends a Heartbeat message. The configured Producer Heartbeat time (16-bit – value in ms), located at index 1017H, will be used as an interval time. If this interval time expires, a message with the following contents will be sent:

Byte	0	1...7
Content	Producer State	reserved

Table 17: Heartbeat Message Structure

The COB-ID that is used is 0700H + the node address. The Heartbeat Producer gives its status, which can be any of the following values, in the first byte of the message:

- 00H BOOTUP
- 04H STOPPED
- 05H OPERATIONAL
- 7FH PRE-OPERATIONAL

The Heartbeat Producer is deactivated when the producer Heartbeat time is set to 0.

8.8.4 Heartbeat Consumer

The Heartbeat Consumer analyzes Heartbeat messages sent from the producer. In order to monitor the Producer, the Consumer requires every producer’s node address, as well as the consumer Heartbeat time.

For every monitored Producer, there is a corresponding sub-entry that has the following contents:

	MSB		LSB
Bit	31-24	23-16	15-0
Value	00H	Node-ID	Consumer Heartbeat Time

Table 18: Structure of a Consumer Heartbeat Time Entry

The Consumer is activated when a Heartbeat message has been received and a corresponding entry is configured in the OD. If one of the activated Heartbeat times expires during an active Heartbeat consumer without receipt of a corresponding Heartbeat message, then the consumer for this producer is deactivated.

The Heartbeat consumer is completely deactivated when the consumer Heartbeat time is given a value of 0.

8.9 Network Boot-Up

The NMT-Master is responsible for booting of the network. The boot procedure takes place over several steps. According to the type of networked CANopen device, the identifier defaults to pre-defined values (for minimum CANopen devices) or is configured via SDO services. The pre-defined configuration for the identifier values include Emergency Objects, PDOs and SDOs. These are calculated according to node addresses, which can be located between 1 and 128 and are added to a base COB-identifier that determines the function of an object.

Bit	10			7	6						0
COB-Identifier											
	Function Code				Node-ID						

Table 19: Calculation of the COB-identifier from the Node Addresses

This base COB- identifier (according to CiA DS301 Pre-Defined Connection Set) is determined as follows:

Object	Resulting COB-ID [hex]	Resulting COB-ID [decimal]	Communication Parameter at Index
EMERGENCY	80H + Node-ID	129 – 255	
PDO1 (tx)	180H + Node-ID	385 – 511	1800H
PDO1 (rx)	200H + Node-ID	513 – 639	1400H
PDO2 (tx)	280H + Node-ID	641 – 767	1801H
PDO2 (rx)	300H + Node-ID	769 – 895	1401H
PDO3 (tx)	380H + Node-ID	896 – 1022	1802H
PDO3 (rx)	400H + Node-ID	1025 – 1050	1402H
PDO4 (tx)	480H + Node-ID	1152 – 1278	1803H
PDO4 (rx)	500H + Node-ID	1281 – 1406	1403H
SDO (tx)	580H + Node-ID	1409 – 1535	
SDO (rx)	600H + Node-ID	1537 – 1663	
Nodeguarding	700H + Node-ID	1793 – 1919	(100EH)

Table 20: Base COB identifier

Configuration data can be loaded on Slave devices via the pre-defined SDO. PDOs can be transmitted after nodes are set from *Pre-Operational* to *Operational* state by the NMT service *Start Remote Node*. Minimum CANopen devices also support the *Stop Remote Node*, *Enter Pre-Operational State*, *Reset Node*, *Reset Communication* services. As indicated in Figure 3, networked nodes automatically enter *Pre-Operational* following boot-up and initialization. The *Reset Node* service completely resets target nodes. *Reset Communication* resets communication parameters.

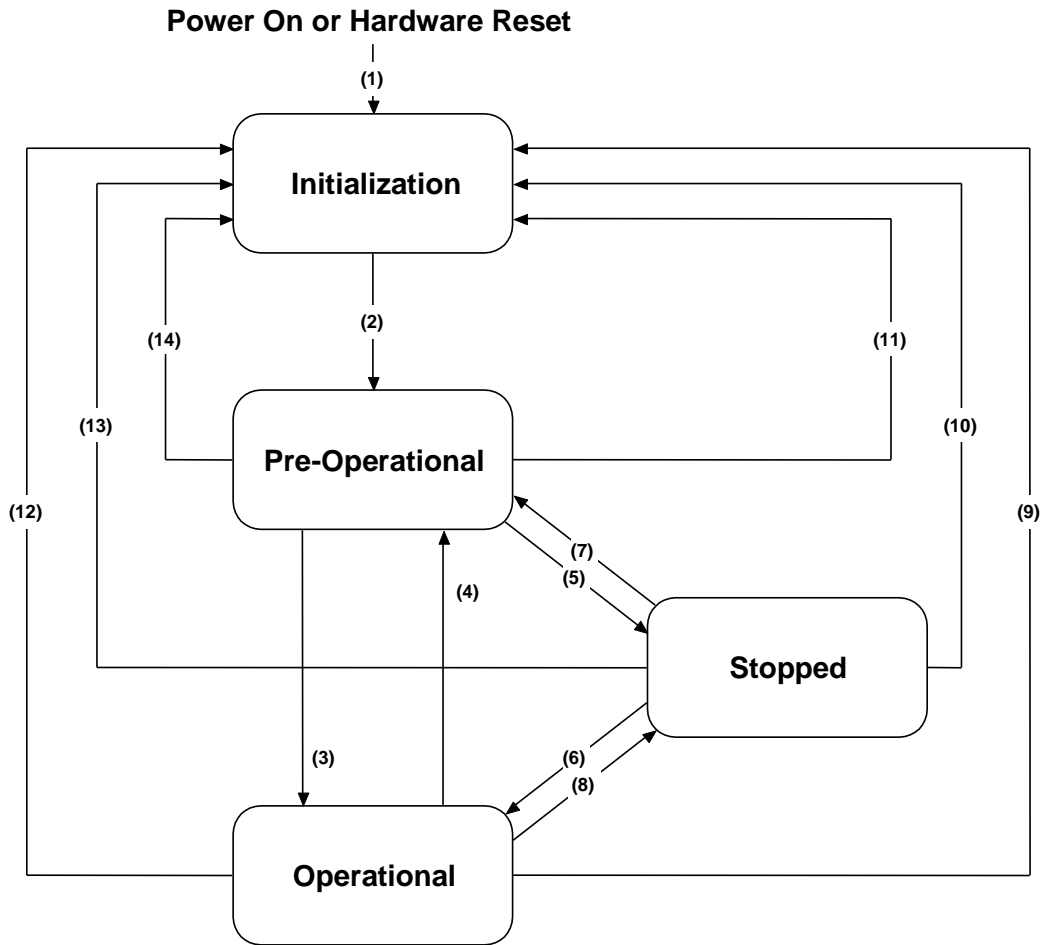


Figure 8: State diagram of a CANopen device

State transition	Action required
(1)	following "Power On", automatically switches into "Initialization" state
(2)	"Initialization" finished, automatically switches into "Pre-Operational" state
(3), (6)	NMT service "Start Remote Node"
(4), (7)	NMT service "Enter Pre-Operational State"
(5), (8)	NMT service "Stop Remote Node"
(9), (10), (11)	NMT service "Reset Node"
(12), (13), (14)	NMT service "Reset Communication"

Table 21: Description of State Flow Diagram Symbols

8.10 Object Dictionary Entries

Beside the parameters for the PDOs, a number of additional entries in the Object Dictionary belong to the data that specify a CANopen device. The communication profile contains such information as:

- the device type at index [1000H];
- the error register at index [1001H];
- the Pre-Defined Error Field at [1003H];
- the identifier of the SYNC message at [1005H];
- the device name at [1008H],
- the hardware and software version of the manufacturer at [1009H] and [100A];
- the node address at [100BH];

- the parameter Guard Time at [100CH] and
- the parameter Life Time Factor at [100DH].

In the device type, information about the implemented device profile and the capabilities of the device is encoded. The error register gives information about internal errors of the device; the pre-defined error field provides an error log. In case the Guard Time and Life Time Factor are unequal to Zero, the multiplied values result in the Life Time of the CANopen device for the node monitoring protocol.

8.11 PDO Mapping Example

All network variables can be transferred by PDOs, which can transmit a maximum of 8 bytes of information. The allocation of variables to PDOs is defined by mapping tables. These variables are addressable via the Object Dictionary. Reading and writing of entries to the Object Dictionary occurs by means of Service Data Objects (SDO), which are used to configure the network by means of a special configuration tool.

This process is illustrated below in Table 22. Inputs 2 and 3 of device A are to be transferred to the outputs 1 and 3 of device B. Both devices support complete mapping.

Device A:

1000H	Device Type
.....	
6000H,1	Input 1, 8 Bit
6000H,2	Input 2, 8 Bit
6000H,3	Input 3, 8 Bit
....	

Transmit PDO Mapping Parameter

1A00H,0	# of Entries	2	
1A00H,1	1.Map Object		60000208H
1A00H,2	2.Map Object		60000308H

Transmit PDO Communication Parameter:

1800H,0	# of Entries	2
1800H,1	COB-ID	501
1800H,2	Transm. Type	255
....		

Resulting PDO:

COB-ID	DATA	
501	Output 1	Output 3

Table 22: PDO Mapping Example

Transmit and receive PDOs utilize the same CAN identifier 501. Thus, device B automatically receives the PDO transmitted by device A. The recipient, device B, interprets the data in accordance with its mapping scheme; it passes the first byte at output 1 and the second byte at output 3. These correspond to inputs 2 and 3, respectively of the transmitting device A.

8.12 Input/Output Assignment to Object Dictionary Entries

The CANopen Chip CoC-100 allows an easy configuration for a specific CANopen application. The fixed number of inputs and outputs on the CANopen Chip CoC-100 makes easy configuration of Process Data Objects (PDOs) possible. Both digital and analog inputs, as well as the digital outputs, are configured in accordance with CiA standards. Configuration of Object Dictionary Input/Output entries for the CANopen Chip CoC-100, according to data type, is shown in Table 23.

Data Type	Index / Subindex	Size
Digital Input		
DI0 ... DI7	6000H / 1	BYTE
DI8 ... DI15	6000H / 2	BYTE
DI16 ... DI23	6000H / 3	BYTE
Digital Outputs		
DO0 ... DO4	6200H / 1	BYTE
DO8 ... DO15	6200H / 2	BYTE
Analog Inputs		
AI0	6401H / 1	WORD
AI1	6401H / 2	WORD
AI2	6401H / 3	WORD
AI3	6401H / 4	WORD
AI4	6401H / 5	WORD
AI5	6401H / 6	WORD
AI6	6401H / 7	WORD
AI7	6401H / 8	WORD
PWM Outputs		
PWM0	6500H / 1; 6510H / 1	WORD
PWM1	6500H / 2; 6510H / 2	WORD
PWM2	6500H / 3; 6510H / 3	WORD
PWM3	6500H / 4; 6510H / 4	WORD

Table 23: Object Dictionary Input/Output Entries CoC-100

 
Note:

After boot-up of the CANopen Chip CoC-100, objects can be accessed via SDOs. If the node is in state *Operational*, objects can be accessed via PDOs. The default mapping parameters applies for Object Dictionary Input/Output entries. Any modification of mapping parameters can be done via SDO with the help of a network configuration tool.

9 CANopen Chip CoC-100 Operation

9.1 CANopen State Transitions

The structure of messages that changes the state of a CANopen node is as follows:



NodeID Node address; NodeID = 0 to address all devices (Broadcast)
cs Command

Table 25 summarizes all NMT-Master messages used for status control:

Command (cs)	Description	Function	State after Execution
1 (01H)	Start Remote Node	Starts the CANopen device and PDO transmission, activates outputs	OPERATIONAL
2 (02H)	Stop Remote Node	Stops PDO transmission, renders outputs in error state	STOPPED or PREPARED
128 (80H)	Enter Pre-Operational State	Stops PDO transmission, SDO remains active	PRE-OPERATIONAL
129 (81H)	Reset Node	Executes a system Reset; Initial Start-up, resets all settings to default values	PRE-OPERATIONAL
130 (82H)	Reset_Communication	Resets all communication parameters to default values	PRE-OPERATIONAL

Table 25: NMT-Master messages for status control

9.2 Power On

After "Power-On", the CANopen Chip CoC-100 executes required initialization routines and switches into *Pre-Operational* state.

9.3 PRE-OPERATIONAL

Process Data Objects (PDOs) are not active in *Pre-Operational* state. The default identifier for Service Data Objects (SDOs) is available and all necessary network configurations can be executed via SDO. At the end of the configuration process, the CANopen device can be rendered into *Operational* state. This can be done by the network Master or by the user with the help of a network configuration tool.

9.4 OPERATIONAL

All Process Data Objects (PDOs) can be exchanged in *Operational* state. Access via SDO is also possible.

9.5 STOPPED

Network communication is suspended in state *STOPPED*. This does not affect the Node Guarding and the “Heartbeat”, if this was enabled before. This state can be used to render the application into a “Safety State”. In *STOPPED* state PDO, SDO, SYNC and Emergency communication are **NOT** functioning. Leaving this state is only possible with a NMT message.

9.6 Restart Following Reset / Power-On

Each Reset of the CANopen Chip CoC-100 transmits an emergency message without data contents. Temporary operational failure of the CANopen Chip CoC-100 and subsequent power-up of the device are detected without Node Guarding (*refer to Section 0*), as the sending device can be determined by the message identifier.

The CANopen Chip CoC-100 distinguishes between “Load”_Start and “Save”_Start. “Load”_Start is necessary:

For initial operation of the CANopen Chip CoC-100 after its delivery if the device parameters (Object Dictionary entries in RAM) should be overwritten by default values

With “Load”_Start, all default CANopen Chip CoC-100 Object Dictionary entries are copied to RAM after Reset/Power On (manufacturer default values).

The string “save” must be written to object [1010H] at subindex 1 in order to carry out the “Save”_Start routine. With “Save”_Start all Object Dictionary entries are copied from nonvolatile memory to RAM after a Reset/Power-On using the saved user-specific values. If the bus Master or the user, by means of a network configuration tool, modifies Object Dictionary entries, then the modifications are only active as of the next RESTART if “Save” is written to object [1010H] in subindex 1. This means that only the stored values are valid after the Reset/Power-On of the CANopen Chip CoC-100. These values are stored then in the nonvolatile memory and, in the event of power-down, are not lost. A “Save”_Start can take up to 1.5 seconds, because the entire OD is read from the nonvolatile memory and written into RAM.

All device parameters can be stored in the nonvolatile memory using object [1010H] in subindex 1. In order to prevent unintended storage of parameters in the nonvolatile memory device, a special “Save” signature must be written to subindex 1. This 32-bit signature (in hex format) appears as follows:

MSB				LSB
‘e’	‘v’	‘a’	‘s’	
65H	76H	61H	73H	

All device parameters can be reset to manufacturer default values according to CiA 301 or CiA 401 standards via the object [1011H] in subindex 1. In order to prevent an unintended reset following a store instruction with the “Save” signature, the “Load” signature must be written to subindex 1. This 32-bit signature (in hex format) appears as follows:

MSB				LSB
‘d’	‘a’	‘o’	‘l’	
64H	61H	6fH	6cH	

In order to set the default values, a Reset/Power-On must be subsequently executed.

9.7 NMT-Boot-Configuration

The CANopen Chip CoC-100 can be configured, that it works as NMT-Boot-Master for all CANopen-Nodes in the network. The configurations are made in the Object Dictionary at Index [2001H]. Subindex 1 is the entry for NMT-Boot-Enable:

- 0 (default), Node is no Boot-Master
- 1 Node is Boot-Master.

Subindex 2 is the entry for NMT-Start-Time: It is the delay-time [ms] after this the node sends the NMT-Boot-Message (default 500ms, max. 65s).

The entries for NMT-Boot-Configuration are saved into nonvolatile memory when they are written. They are not used at save and recover the OD (see also section 9.6). So, the entry has to be written directly with the recommended values to configure the CANopen Chip CoC-100 as Boot-Master or not. The configuration will be active at the next reset of the CANopen Chip CoC-100.

Example for SDO messages for write NMT-Boot-Enable und NMT-Start-Time:

Action	CAN ID for Node 40H	DLC	SDO Cmd	Index	Sub-index	Value
set NMT-Boot-Enable	640	8	2F	0 1	2 0	01 00 00 00
clear NMT-Boot-Enable	640	8	2F	0 1	2 0	00 00 00 00
set NMT-Start-Time to 3E8H (1000 dec)	640	8	2B	0 1	2 0	E8 03 00 00

Table 26: SDOs to set the NMT boot configuration

The used CAN-Identifier is 600H + Node-ID. The values are according to CANopen-Standard LSB first.

9.8 Analog Input Operation

9.8.1 Handling Analog Values

This section provides general information on data storage of analog values in a CANopen frame.

The CANopen Standard CiA 401 defines that all analog values till 15 bits have to be stored as 16-bit value aligned left with a sign bit. On the CANopen Chip CoC-100 all A/D-conversion values are stored with 12-bit data. Consequently, for each analog channel, two data bytes must be transmitted.

These data bytes are stored and transmitted on the CAN bus as shown in Table 27 and Table 27: Storage of Analog Values Byte 2

Byte 2							
Sign	14	13	12	11	10	9	8
+/-	Bit 11	Bit 10	Bit 9	Bit 8	Bit 7	Bit 6	Bit 5

Table 27: Storage of Analog Values Byte 2

Byte 1							
7	6	5	4	3	2	1	0
Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	0	0	0

Table 28: Storage of Analog Values Byte 1

On the CAN bus, first byte 1 and then byte 2, is transmitted.

9.8.2 Calibrate Analog Values

The CANopen Chip supports the calibration of the analog values. The calibration takes effect to the 16-bit value stored in byte 1 and 2.

The offset could be changed via object 642EH. The default value is '0.0'. This value is added to the result of the A/D-conversion after the gain (pre-scaling value) takes effect (see formula). The values after the decimal point have no effect.

The gain (pre-scaling value) could be changed via object 642FH. The default value is always '1.0'. This value is multiplied with the result of the A/D-conversion (see formula).

$$calibratedResult_{/hex} = (result_{/hex} \cdot gain_{/float}) + offset_{/float}$$

The result of the calibration is limited to upper limit ($2^{15} - 1$) and lower limit 0. Therefore, the result can't get negative.

9.8.3 Formula for Calculating the Analog Input Value

The formula listed below is used to calculate a voltage value of an analog input from the A/D-conversion result:

$$AI_{n/V} = \frac{resultA/Dconversion_{/hex} \cdot voltagerange_{/V}}{2^{resolutionADC}}$$

The following example will explain the use of this formula in more detail:

over CAN transmitted A/D-value	= 012A0H (4768 dec)
voltage range	= 5V (standard supply on pins VAREF and GND)
logical resolution ADC	= 15 Bit
analog input value (AI)	= 0.727V

For the lowest quantization of the A/D-value the real resolution of the ADC has to be used.

A/D-value	= 01H
voltage range	= 5V (standard supply on pins VAREF and GND)
real resolution ADC	= 12 Bit
lowest resolution	= 1.22 mV/Digit

9.8.4 Selecting the Interrupt Trigger

This object entry determines which event can release an interrupt. For this purpose, the object [6421H] "Interrupt Trigger Selection" is available. If the "Global Interrupt Enable" [6423H] is activated, the release of an interrupt transmits the TX-PDO for analog inputs. A specific subindex is available for each analog input channel. This allows precise configuration of the interrupt event for each channel.

The following values are available:

Bit Number	Interrupt Trigger
0	Upper limiting value exceeded
1	Lower limiting value exceeded
2	Input value fluctuates more than <i>DELTA</i> [6426H]
3	<i>Not supported!</i>
4	<i>Not supported!</i>
5 to 7	Reserved

Table 29: Interrupt Trigger Bits

Example:

6421H,1 = 04H means: the first analog input must fluctuate by more than *DELTA* in order to send the PDO.

Note:

The default values for all analog inputs are set to 04H.

9.8.5 Interrupt Source

This object entry stores which analog input caused the interrupt. The object [6422H] "Analog Input Interrupt Source" is available for this purpose. Every single bit refers to the corresponding analog input channel. These bits will be reset automatically if the entry has been read by a SDO or the object entry was transmitted with a PDO.

The following convention is used:

"1": Channel caused an interrupt,
"0": Channel caused no interrupt.

Example:

6422H,1 = 01H means: analog input channel 0 caused an interrupt.

9.8.6 Interrupt Enable

All interrupts can be enabled or disabled using the object entry [6423H] "Analog Input Global Interrupt Enable". The default value is "0", indicating interrupt execution is disabled. To enable the interrupt execution, the value "1" must be written to the object entry (*also refer to section 9.8.4*).

9.8.7 Interrupt Upper and Lower Limit

An interrupt is released, if the analog input value is higher or lower than the specified limiting value in the applicable subindex. The upper limit is specified in object [6424H], the lower limit in [6425H]. To release an interrupt, the OD entry [6423H] must be set to "1".

Each analog input value will be transmitted as long the trigger condition is given. This assumes that no other trigger condition, such as the Delta Function, is enabled. The limit values must be specified as 32-bit value aligned left.

For this purpose, the objects:

- [6424H] "Analog Input Interrupt Upper Limit Integer" and
- [6425H] "Analog Input Interrupt Lower Limit Integer"

are available.

Note:

The default value in both entries for all analog inputs is "0".

Example:

6423H = 1, 6421H,1 = 05 and 6424H,1 = 2000H:

The analog input #1 releases an interrupt if the value exceeds the limit of 2000H, and then the value fluctuates by more than specified in the Delta function (see following section).

9.8.8 Delta Function

The delta function allows configuration of the extent to which an analog input value can fluctuate since the most recent transmission. Only if the fluctuation on the analog input exceeds the value specified in the delta function transmission of the corresponding PDO on the CAN bus is initiated. This configuration can be done using the object [6426H] *Analog Input Interrupt Delta*. Entries specify the number of digits in the conversion result that are allowed to fluctuate. The default value for all four analog inputs is 5. This means that the A/D-conversion result may change by up to 5 digits before a PDO is transmitted. The value must be specified as aligned left and assumes 10-bit resolution.

Note:
The default value for delta for all analog inputs is "A0H".

9.8.9 Example for Trigger Conditions

In the following figure the combination of objects 6424H to 6426H is shown.

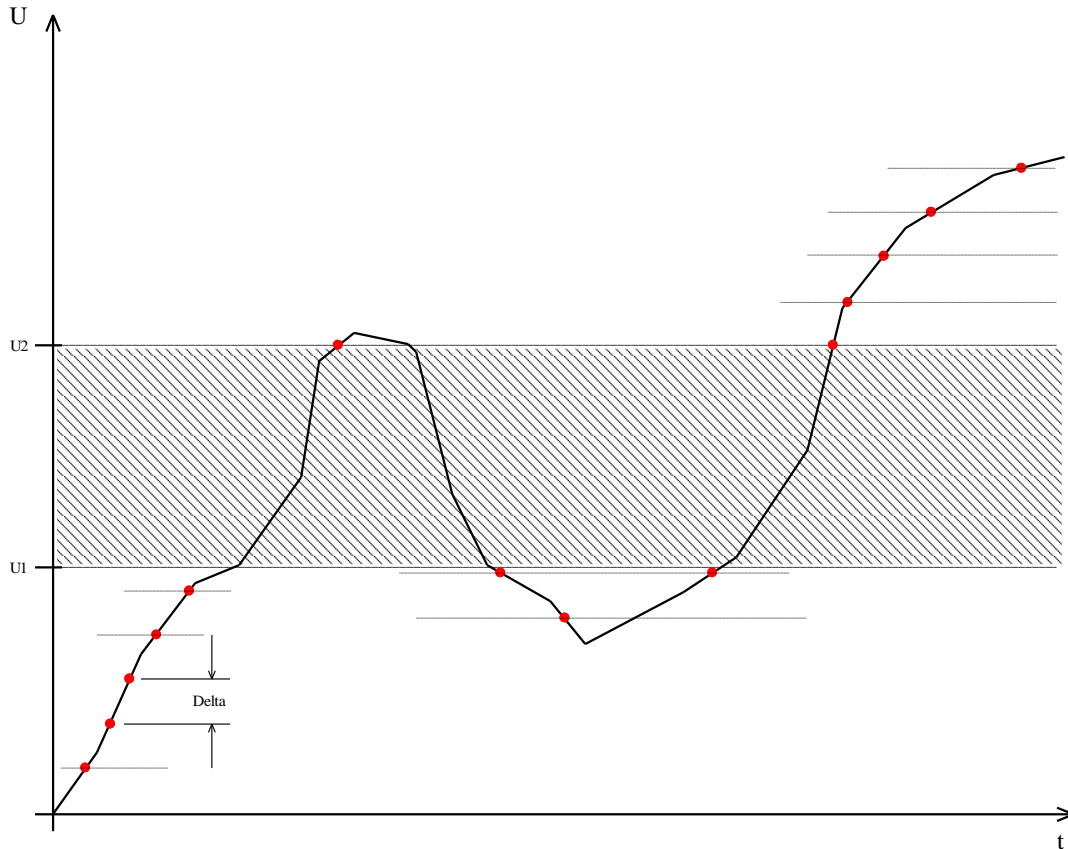


Figure 9: Trigger Conditions

The value $U1$ was entered at index [6424H] - Lower Limit and $U2$ at index [6425H] - Upper Limit in OD. Furthermore, the value Δ was entered at index [6426H] - Delta. The shown voltage trace is located at an analogue input. At the moments, what are marked with λ , a corresponding PDO will be transmitted from CANopen Chip CoC-100. If the analogue input value is between $U1$ and $U2$ (the hatched area), no PDO will be transmitted.

9.9 Functionality of PWM Outputs

The CANopen Chip CoC-100 can generate PWM-signals. For every Output it exists one OD-entry for period (index [6510H]) and one for duty cycle (Index [6500H]). Both parameters have the format unsigned 16.

The duty cycle is declared in percent. That means, the value 0H - 0% and 0FFFFH - 100% are corresponding.

The default value for all PWM-Outputs is 0.

The period is declared as a multiple of $1\mu s$. The value of 1000 corresponds with a frequency of 1kHz.

The default value for all PWM-Outputs is 1000.

The lowest adjustable value is 33.

9.10 Emergency Message

In the event of an error, the status of the CANopen Chip CoC-100 is transmitted via a high-priority Emergency Message. These messages consist of 8 data bytes and contain error information. The Emergency Message is transferred as soon as one of the specified errors occurs. A specific Error Message is only transmitted once, even if the recent error is not resolved for a longer period of time. If all error causes are eliminated, then an Error Message with contents "0" (error eliminated) is transmitted. The structure of the 8-byte Emergency Message is depicted below:

BYTE 0	BYTE 1	BYTE 2	BYTE 3	BYTE 4	BYTE 5	BYTE 6	BYTE 7
Error Code		Error-Register [1001H]	Manufacturer-specific Error Code				

Table 30: Emergency message

9.10.1 Error Code

The Error Code (byte field 0+1, LSB, MSB) indicates whether an error is present or whether the error has already been eliminated (no error). The following error codes are valid:

- 0000H: no error
- 1000H: global error
- 5000H Hardware Error (Hardware reset was detected)
- 6100H Software Error (Software reset was detected)
- 6101H Software Error (Watchdog reset was detected)
- 6102H Software Error (Stack overrun of microcontroller)
- 8110H CAN-Message lost (busload too high)
- 8120H Device is in Error passive mode
- 8130H: Lifeguard or Heartbeat Error

In case of a Heartbeat Consumer error, the Node-ID of the failing node is transmitted in the manufacturer-specific error code field.

- 8140H Recovery from CAN-BUSOFF
- 8210H The PDO was not processed due a length error.

9.10.2 Error Register

The Error Register (byte field 2) can contain the following values:

- 81H: Occurrence of a manufacturer-specific error
- 11H: CAN communication error
- 01H: Occurrence of a common error
- 00H: Error has been eliminated - error reset

9.11 Display State at Run and Error LED

The current state of the CANopen Chip CoC-100 is displayed at the both state-LEDs D1 und D2. The functionality of both LED's is defined in standard **CiA 303-3 V1.0**.

9.11.1 Run LED

The green Run LED (D2) displays the NMT State of the device. The Table 31 shows the different states and their meaning.

RUN LED	state	meaning
On	OPERATIONAL	CANopen Chip CoC-100 is in state OPERATIONAL
Blinking relation 50:50	PREOPERATIONAL	CANopen Chip CoC-100 is in state PREOPERATIONAL
Single Flash	STOPPED	CANopen Chip CoC-100 is in state STOPPED
Triple Flash synchronous with the Error LED	Stack overrun	The software caused a stack overrun of the microcontrollers.
Blinking by turns with Error LED	access with LSS	A LSS service is running.
Synchronous fast Blinking with Error LED	Reset to default values	At DIP-Switch is the reset to default values set.

Table 31: Run LED States

9.11.2 Error LED

The red Error LED (D1) displays the current error state of the CANopen Chip CoC-100. The Table 32 shows the different states and their meaning.

ERROR LED	State	Description
Off	no error	no error on device detected
Single Flash	Warning Limit reached	The Warning Limit in CAN Controller was reached (too much Error Frames on CAN Bus).
Blinking by turns with Run LED	access with LSS	A LSS service is running.
Double Flash	Error Control Event	An error at life guarding, node guarding or Heartbeat was detected.
Triple Flash synchronous with the Run LED	Stack overrun	The software caused a stack overrun of the microcontrollers.
On	Bus Off	The CAN controller is in state "Bus Off".
Synchronous fast Blinking with Run LED	Reset to default values	At DIP-Switch is the reset to default values set.

Table 32: Error Led States

10 Operation in the Event of Errors

10.1 State of the CANopen Chip CoC-100 in the Event of Errors

The object dictionary entry "Error Behavior" at index [1029H] for CoC-100 can be used to define which state the CANopen Chip CoC-100 should transfer to in case of an error.

The following entries are possible:

- 0: change state to PRE-OPERATIONAL
- 1: no change of state
- 2: change state to STOPPED

These settings over all possible error sources described in *sections 0*. The entries Output Error (subindex 2) and Input Error (subindex 3) are not supported.

The error code 6102H sets the outputs into error state. This error is critical and it can leave only by reset.

10.2 Output Handling in the Event of Errors

The user can determine how each output is supposed to behave in the event of an error. The outputs are only changed, when at index "Error Behavior" a state change was activated. All errors that are not lead to a state change do not change the outputs.

10.3 Digital Outputs

On digital outputs, error handling can be pre-defined via the objects [6206H] ("*Error_Mode_Output_8-Bit*") and [6207H] ("*Error_Value_Output_8-Bit*"). These entries can be configured by means of a network configuration tool. In the default configuration, the outputs do not change their states in the event of an error.

A value of "1" at the bit position for an applicable output in the object [6206H] results in writing the bit value ("0" or "1") located in the object [6207H] to the corresponding output.

Example for digital outputs:

Index	Subindex	DO 3	DO 2	DO 1	DO 0	Description
6206H	1	0	0	1	1	Error Mode Output 8-bit
6207H	1	X	X	0	1	Error Value Output 8-b

Table 33: Example for Error Handling digital outputs

In the event of an error, the digital output DO0 is set to 1 while DO1 is set to 0. The status of the outputs OUT2 and OUT3 remain unchanged.

10.3.1 PWM Outputs

On PWM outputs, error handling can be pre-defined via the objects [6543H] ("*PWM Output Error Mode*") and [6544H] ("*PWM Output Error Value*"). These entries can be configured by means of a network configuration tool. In the default configuration, the outputs do not change their states in the event of an error.

A value of "1" in the object [6543H] results in writing the value located in the object [6544H] to the corresponding output.

Example for PWM outputs:

Index	Subindex	PWM0 Case 1	PWM0 Case 2	Description
6543H	1	0	1	PWM Output Error Mode
6544H	1 = 4000H	no change	4000H, 25%	PWM Output Error Value

Table 34: Example for Error Handling PWM outputs

In the event of an error, in case 1 the PWM output 0 is not changing. In Case 2 the duty cycle changes to 25%.

10.4 Changing from Error State to Normal Operation

In the event of an error, the outputs retain their active values until overwritten (by means of PDO/SDO) by new output values. This requires that the error, such as “Bus Off” or “Life Guarding” error, is eliminated and the CANopen Chip CoC-100 be switched into *Operational* state by a Master “*Start Remote Node*” message.

11 Object Dictionary CANopen Chip CoC-100

Index [hex]	Object type	Name	Data type	in PDO mappable
1000	Var	Device Type	Unsigned32	-
1001	Var	Error Register	Unsigned8	-
1003	Array	Error Message	Unsigned32	-
1005	Var	Identifier SYNC-message	Unsigned32	-
1007	Var	SYNC window length	Unsigned32	-
1008	Var	Device name	String	-
1009	Var	Hardware Version	String	-
100A	Var	Software Version	String	-
100C	Var	Guard Time	Unsigned16	-
100D	Var	Life Time Factor	Unsigned8	-
1010	Array	User-Parameter save	Unsigned32	-
1011	Array	Default-Parameter reload	Unsigned32	-
1014	Var	Identifier Emergency	Unsigned32	-
1016	Array	Consumer Heartbeat Time	Unsigned32	-
1017	Var	Producer Heartbeat Time	Unsigned16	-
1018	Record	Identity Object	Identity	-
1029	Array	Error Behavior	Unsigned8	-
1200	Record	1 st Server SDO Parameter	SDO Parameter	-
1201	Record	2 nd Server SDO Parameter	SDO Parameter	-
1400	Record	RxPDO1 Communication parameter	PDOComPar	-
1401	Record	RxPDO2 Communication parameter	PDOComPar	-
1402	Record	RxPDO3 Communication parameter	PDOComPar	-
1403	Record	RxPDO4 Communication parameter	PDOComPar	-
1600	Record	RxPDO1 Mapping parameter	PDOMapping	-
1601	Record	RxPDO2 Mapping parameter	PDOMapping	-
1602	Record	RxPDO3 Mapping parameter	PDOMapping	-
1603	Record	RxPDO4 Mapping parameter	PDOMapping	-
1800	Record	TxPDO1 Communication parameter	PDOComPar	-
1801	Record	TxPDO2 Communication parameter	PDOComPar	-
1802	Record	TxPDO3 Communication parameter	PDOComPar	-
1803	Record	TxPDO4 Communication parameter	PDOComPar	-
1A00	Record	TxPD01 Mapping parameter	PDOMapping	-
1A01	Record	TxPD02 Mapping parameter	PDOMapping	-
1A02	Record	TxPD03 Mapping parameter	PDOMapping	-
1A03	Record	TxPD04 Mapping parameter	PDOMapping	-
2000	Var	I/O Configuration	Unsigned8	-
2001	Var	NMT-Boot-Configuration	Unsigned8	-
2500	Record	for production only		-
6000	Array	PDO Digital Input	Unsigned8	x
6200	Array	PDO Digital Output	Unsigned8	x
6206	Array	Error Mode Digital Output	Unsigned8	-
6207	Array	Error State Digital Output	Unsigned8	-
6401	Record	PDO Analog Input	Integer16	x

Index [hex]	Object type	Name	Data type	in PDO mappable
6421	Array	Interrupt Trigger Selection	Unsigned8	-
6422	Array	Interrupt Source	Unsigned32	x
6423	Var	Global Interrupt Enable	Boolean	-
6424	Array	Interrupt upper Limit	Integer32	-
6425	Array	Interrupt lower Limit	Integer32	-
6426	Record	Input Interrupt Delta	Unsigned32	-
642E	Array	Analog Input offset float	float	-
642F	Array	Analog Input pre-scaling float	float	-
6500	Array	PWM Pulse	Unsigned16	x
6510	Array	PWM Period	Unsigned16	x
6543	Array	PWM Output Error Mode	Unsigned8	-
6544	Array	PWM Output Error Value	Unsigned16	-

Table 35: Object Dictionary of the CANopen Chip CoC-100

Index

A

Analog Input.....	19
Array	31

B

Base COB-identifier	36
Bit rate	23
Bit Rate	16
Board Configuration.....	13
Bus Off.....	49

C

CAN Identifier	25
CAN in Automation e.V.....	28, 31
CAN Interface	23
CAN Message.....	25
CAN Transceiver	14
CAN_GND	23
CAN_HIGH	23
CAN_LOW	23
CANopen Advantages	28
CANopen Features	28
CiA 401	30
CiA 402	30
CiA 405	30
CiA 406	30
CiA 410	30
Communication Parameters	14
Communication Profile	31

D

Defstruct	31
Deftype	31
Delta Function.....	44
Device Name	37
Device Profiles.....	31
Device Type	37
Digital Input.....	19
Digital Output.....	19
DIP-Switch	13
Display State.....	46
Domain	31
Dummy16	34

E

Electrical Parameters	20
Emergency.....	34
Emergency Message	46
Emergency Object	34
Enter Pre-Operational State	24
Environmental Conditions.....	19
Error code	46
0000H.....	46
1000H.....	46

5000H.....	46
6100H.....	46
6101H.....	46
6102H.....	46, 48
8110H.....	46
8120H.....	46
8130H.....	46
8140H.....	46
8210H.....	46
Error Handling.....	34
Error LED	47
Error Message	34
Error Register.....	46
00H.....	46
01H.....	46
11H.....	46
81H.....	46

F

Factory Default Settings.....	17
-------------------------------	----

G

Guard Time	37
------------------	----

H

Handshaking	32
Hardware Version	37
Heartbeat	34
Heartbeat Consumer.....	35
Heartbeat Message.....	35
Heartbeat Producer.....	35
Humidity	19

I

I/O Configuration	16
Index	33
Inhibit Time	32, 33
Interrupt Enable	44
Interrupt Lower Limit	44
Interrupt Source	44
Interrupt Trigger	43
Interrupt Upper Limit	44
ISO 11898	31

L

Life Guarding	26, 34, 49
Life Time Factor	37
Load_Start	41
Lower Limit.....	44

M

Manuals	
Overview	9
Mapping Entry	33
MCP2562	23

Mechanical Specifications 19
 Message Identifier 33
 Minimum Boot-Up 24
 Multiplexed Domain Protocol 32

N

Network Management 34
 NMT 34
 NMT-Master 34
 Node Address 14, 16, 25, 35, 37
 Node Guarding 26, 41
 nonvolatile memory 41

O

Object Dictionary 29, 37
 CANopen Chip CoC-100 50
 Object index
 1000H 37
 1001H 37, 46
 1003H 34, 37
 1005H 37
 1008H 37
 1009H 37
 100AH 37
 100BH 37
 100CH 37
 100DH 37
 1010H 25, 41
 1011H 41
 1017H 35
 1029H 27, 48
 1400H 32, 36
 1401H 36
 1402H 36
 1403H 36
 1800H 32, 36
 1801H 36
 1802H 36
 1803H 36
 2000H 17
 2001H 41
 6000H 33, 39
 6200H 33, 39
 6206H 48
 6207H 48
 6401H 39
 6421H 43
 6422H 44
 6423H 43, 44
 6424H 44, 45
 6425H 44, 45
 6426H 44, 45
 6500H 39, 45
 6510H 39, 45
 6543H 48
 6544H 48
 67FEH 27
 OD 29

Open Networking System 31
 Operating Voltage 20
 Operational 36, 40
 Operational Temperature 19

P

PDO 29, 32, 33
 PDO Mapping 25
 PDO Mapping Tables 37
 PDO-Mapping 33
 Pin Description 12
 Pin Layout 11
 Power Supply 22
 Power-On 40, 41
 Pre-Defined Error Field 37
 Pre-defined Identifier 35
 Pre-Operational 36, 40
 Process Data Object 29
 Process Data Objects 32, 38
PWM Output 19

Q

QuickStart 24

R

Receipt Objects 32
 Record 31
 Reset 14, 26
 Reset Communication 36
 RESTART 41
 RTR-Bit 26
 Run- LED 47

S

Save_ Start 41
 SDO 29, 32, 33
 Service Data Objects 29, 32
 Setup 22
 Shut-Down 24
 Software Version 37
 Start Remote Node 24
 Start Remote Node 36
 Start-Up 24
 Stop Remote Node 36
 STOPPED 41
 Storage Temperature 19
 Subindex 33

T

Technical Data 19
 Transmission Objects 32
 Transmission Types 33

U

Upper Limit 44

V

Var 31

Document: System Manual sysWORXX CANopen Chip CoC-100
Document Number: L-2365_04, Edition November 2023

Do you have any suggestions for improving this manual?

Did you find any mistakes in this manual?

Page

Sent from:

Customer number:

Name:

Company:

Address:

Send to:

SYS TEC electronic AG
Am Windrad 2
D - 08468 Heinsdorfergrund
GERMANY
Fax: +49 (0) 37 65 / 38600-4100
Email: info@systec-electronic.com

